

Installing U shaped clip to ensure stability of auto turner.



When purchasing a Bellsouth 100 incubator with an auto turner. Ensure you have the

- Perforated, metal mesh floor
- U shaped metal clip and
- Auto turner with plastic frame.

Slide the U shaped metal clip over the end piece, with the bottom tongue under the perforated mesh floor. The curved section of the clip should be to the top.

Slide the clip on until the back of the clip is against the end piece.

Place the assembled frame and perforated metal, mesh floor into the incubator base. Remove black bung from the control end of the incubator base.

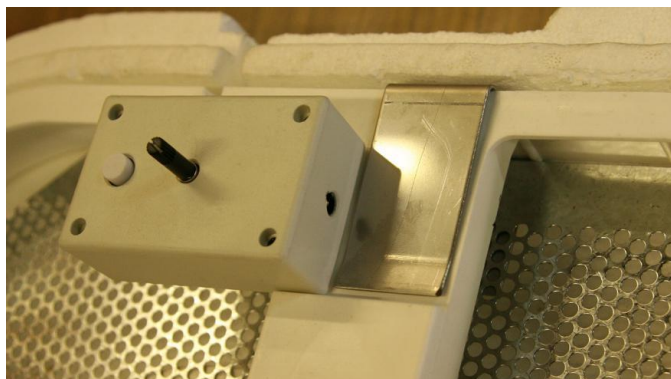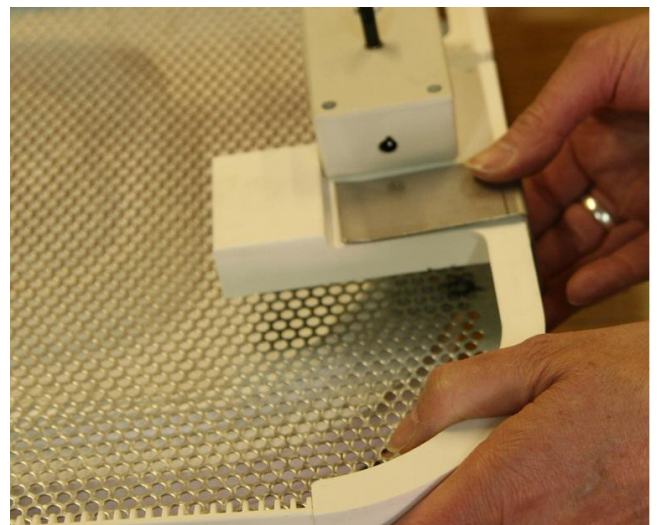

Place the auto turner so the cog gear teeth are sitting in plastic track.

Ensure auto turner end frame is secure.

